

Vent Plugs


Adding vents to Troyer Gourds is quick and simple. You will need a drill and a ¼" size drill bit.

Both the Troyer Vertical and Troyer Horizontal Gourds have built in vent canopies. Using your drill and the ¼" drill bit, drill upward into the vent canopies at a 45 degree angle.




Drill out all the vent canopies; 4 on the Troyer Vertical and 2 on the Troyer Horizontal.

Take the vent plug and insert the "T" shaped end into the hole.

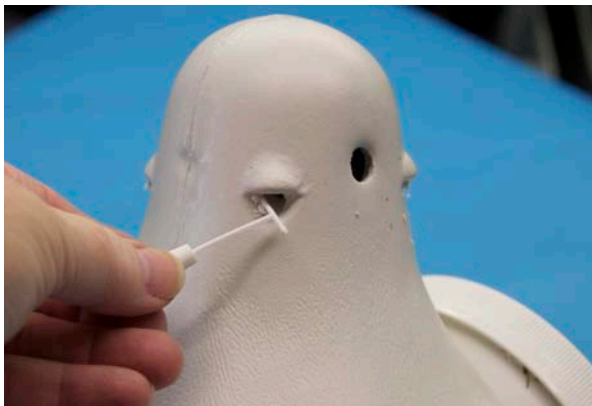

Once all the vent plugs are in place you can leave them open, the plug hangs down, or close them, push the plug into the hole.

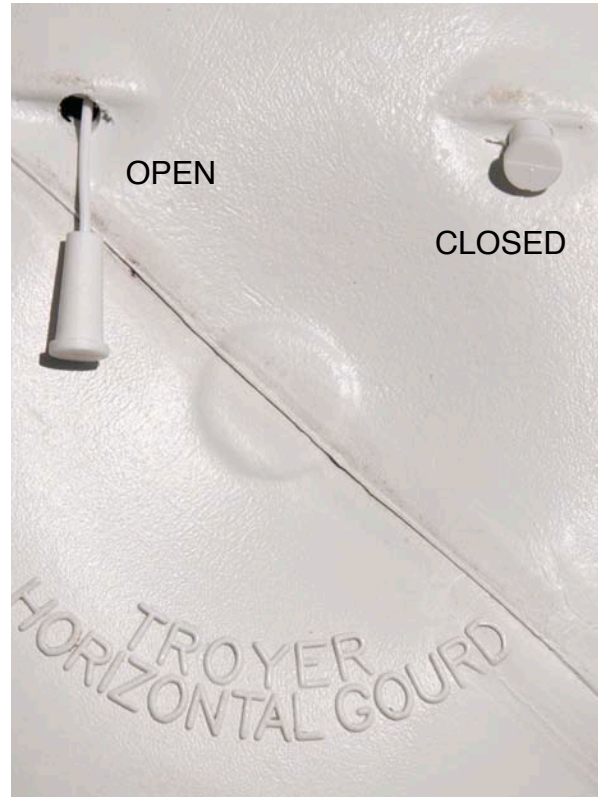

The vent plugs will also work with any gourd or house that you vent that uses a ¼" size hole.

Tips! Be prepared for the hot and humid weather by having the vent plugs in gourds in the closed position. When the hot, humid air descends upon your colony, simply pull the plug and allow it to hang from the hole. The T-shaped end will keep it securely in place.