



No Rockers for Gourd Racks

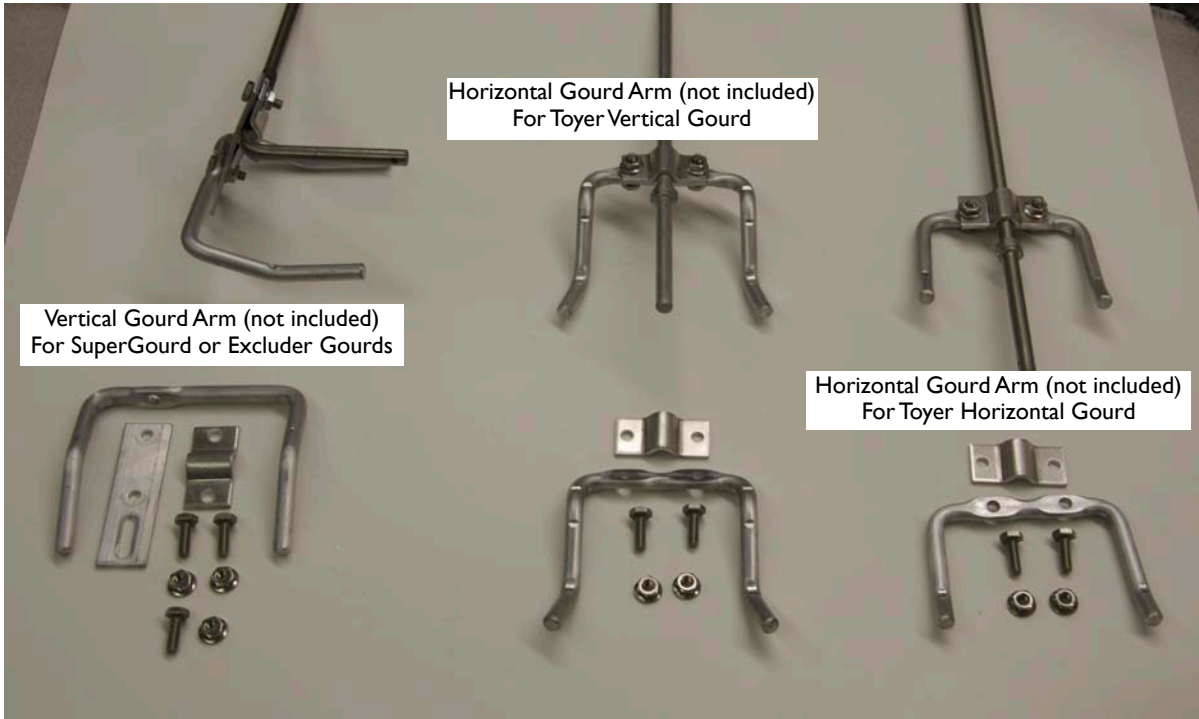

Vertical Gourd Arm for SuperGourd Excluder Gourds.

If gourd is on the gourd arm, remove it. Get the U-shaped bracket and place it to the inside of rod approximately 1/2" behind the bend in the arm. Get your long flat piece that has 2 holes and an oval slot. Align the holes from the long bracket to the u-shaped bracket. Insert the bolts from the long bracket thru the u-shaped bracket. Thread the whiz nuts on. Snug up the bolts but DO NOT OVER TIGHTEN. Get the no rocker arm. There is a flat spot on the arm with a punched hole in it. Place the arm so that the flat piece is on the outside of the flat bracket, and the arms of the no rocker point upwards (as seen in the photo). Insert the bolt into the arm, then the flat bracket inserting the bolt into the oval slot of the flat bracket piece.

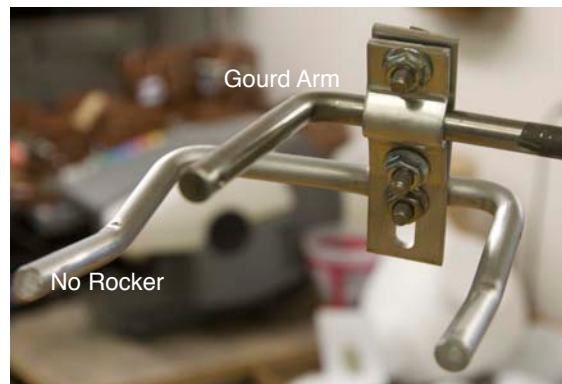


Slip your gourd back on. Adjust the No Rocker Arm by moving it up and down in the slot. Once you have eliminated the motion of the gourd tighten the nut. Remember to put your hitch pin back in the gourd arm.



No Rockers for Gourd Racks

For: Horizontal Gourd Arm and Troyer Vertical Gourds

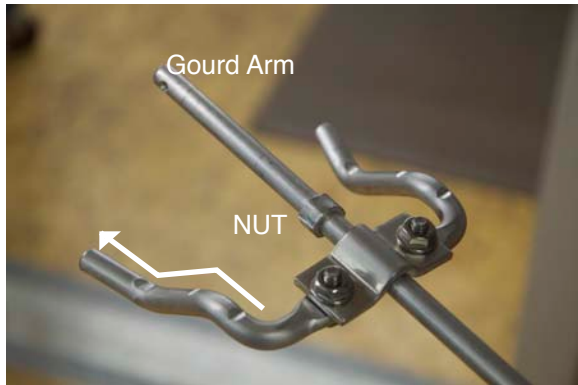

Place the u-shaped bracket onto the top of the gourd arm, approximately $\frac{7}{8}$ " behind the nut, and align the No Rocker arms flat spots with punched holes to the underside of the gourd arm. Orient the No Rocker arm as seen in the photo above. Insert the bolts from the underside thru the No Rocker arm into the u-shaped bracket. Thread the whiz nuts on. Snug the nuts into place but DO NOT OVER TIGHTEN.

Slip your Troyer Vertical Gourd onto the gourd arm and insert the hitch pin that came with gourd rack. The gourd with No Rocker should look like the photo below.



For: Horizontal Gourd Arm and Troyer Horizontal Gourd



Place the u-shaped bracket onto the top of the gourd arm, approximately 1" behind the nut, and align the No



Rocker arms flat spots with punched holes to the underside of the gourd arm. Make sure the No Rockers arm point upwards. Insert the bolts from the underside thru the No Rocker into the u-shaped bracket. Thread the whiz nuts on. Snug the nuts into place but DO NOT OVER TIGHTEN.

Slip your Troyer Horizontal Gourd onto the gourd arm and insert the hitch pin that came with gourd rack. The gourd with No Rocker should look like the photo below.

