


No Rockers for Gourd Mounting Arms

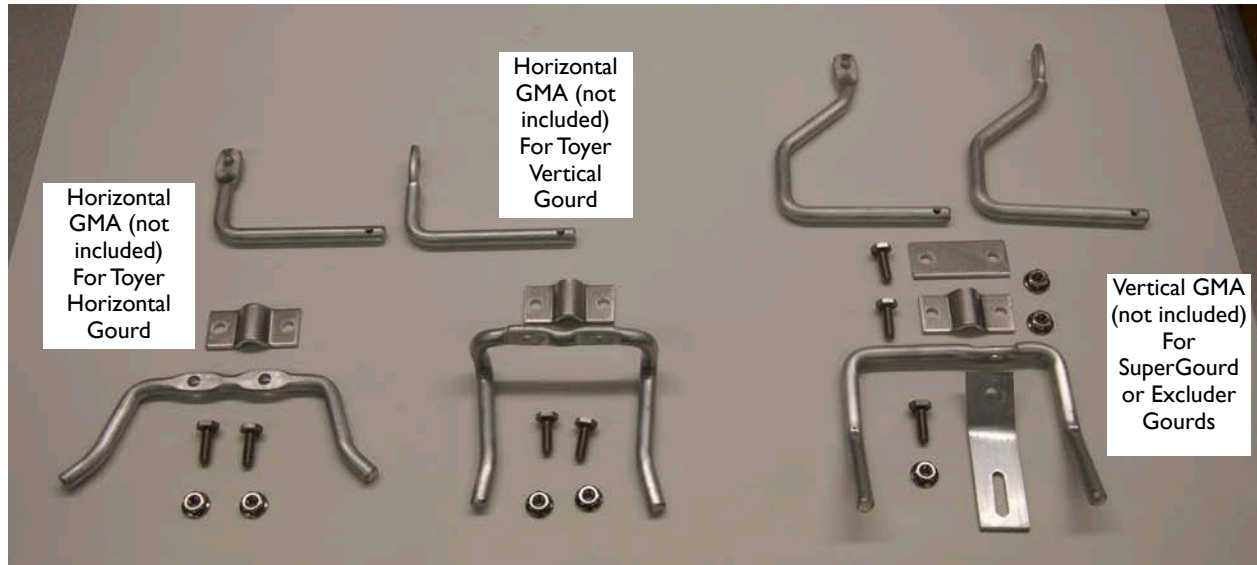

Vertical Gourd Mounting Arm for SuperGourd Excluder Gourds.

If gourd is on the Gourd Mounting Arm, remove it. Get the U-shaped bracket and place it to the inside of GMA near the upper bend (see photo). Get the small back plate with 2 holes and align it with the u-shaped bracket, insert the bolt into the hole on the right side, and thread on the nut.



Get your long flat piece that has 1 hole and an oval slot. Align the hole from the long bracket to the u-shaped bracket with small flat piece. Again using the photo as



a guide place the long bracket to the back side of the short flat piece, left side this time, insert the bolt thru the whole set, and thread on the nut. Make sure your long bracket piece has the bend in it as seen in the photo. Snug up the bolts but DO NOT OVER TIGHTEN. Next get your no rocker arm. There is a flat spot on the arm with a punched hole in it. Place the arm so that the flat piece is on the outside of the flat bracket, and the arms of the No Rocker turn upwards. Insert the bolt into the arm, then the flat bracket inserting the bolt into the oval slot of the flat bracket piece.


Slip your gourd back on. Adjust the No Rocker Arm by moving it up and down in the slot. Once you have eliminated the motion of the gourd tighten the nut. Remember to put your hitch pin back in the gourd mounting arm.



Notice No Rocker Arm Orientation

No Rockers for Gourd Mounting Arms

For: Horizontal GMA and Troyer Vertical Gourds

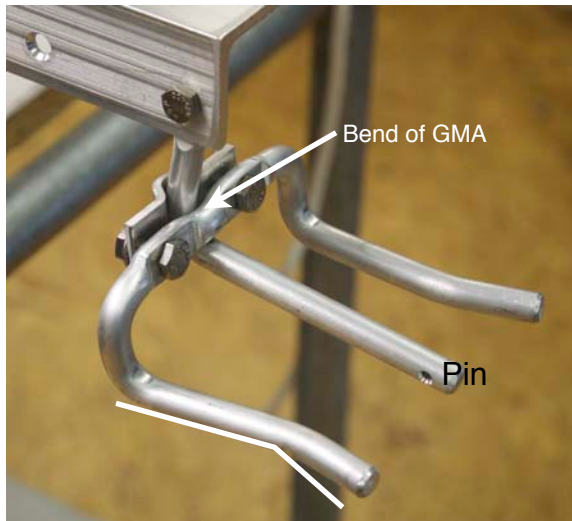


Place the u-shaped bracket onto the backside of the GMA, at the bend. Align the No Rocker arms flat spots with punched holes to the u-shaped brackets holes. Make sure the No Rocker arm is aligned as seen in the photo, AND that the Horizontal GMA's pin is facing you (see photo). Insert the bolts from the No Rocker into the u-shaped bracket. Thread the whiz nuts on. Snug the nuts into place but DO NOT OVER TIGHTEN.

Slip your Troyer Vertical Gourd onto the GMA and insert the hitch pin that came with GMA. The gourd with No Rocker should look like the photo below.



For: Horizontal GMA and Troyer Horizontal Gourd.

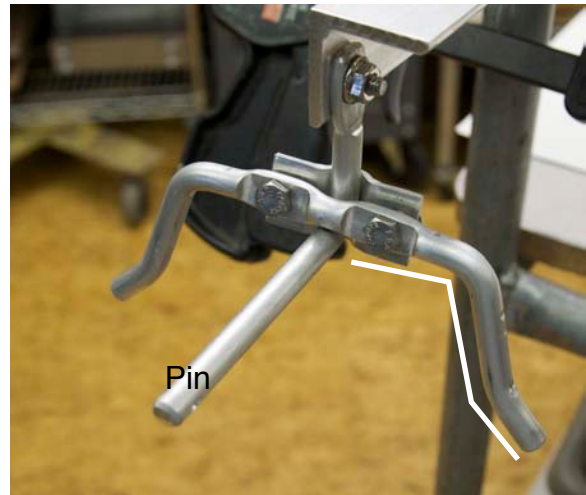

Place the u-shaped bracket onto the backside of the GMA, at the bend. Align the No Rocker arms flat spots with the punched holes to the u-shaped brackets holes. Make sure the No Rocker arm is facing downward AND that the Horizontal GMA's pin is facing you (see photo). Insert the bolts from the No Rocker into the u-shaped bracket. Thread the whiz nuts on. Snug the nuts into place but DO NOT OVER TIGHTEN.

Slip your Troyer Horizontal Gourd onto the GMA and insert the hitch pin that came with gourd rack. The gourd with No Rocker should look like the photo below.



Please note the direction of the bolts and nuts using THG's can work either way as seen in upper and lower photo.